FGI00634
ROLLING SKY LANTERN
rev:0



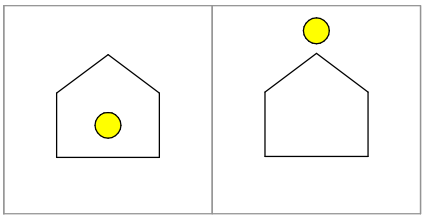

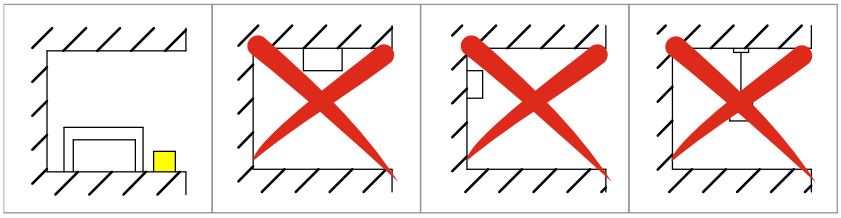

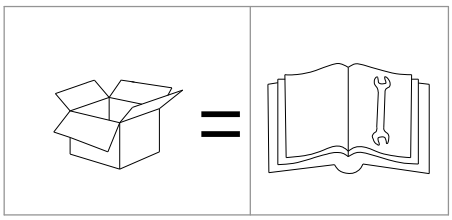

SMALL

3000 K	2700 K
CA117ABBWDI	CA117ABBMDI
CA117ADBWDI	CA117ADBMDI



MEDIUM

3000 K	2700 K
CA118ABBWDI	CA118ABBMDI
CA118ADBWDI	CA118ADBMDI



LARGE

3000 K	2700 K
CA119ABBWDI	CA119ABBMDI
CA119ADBWDI	CA119ADBMDI



1

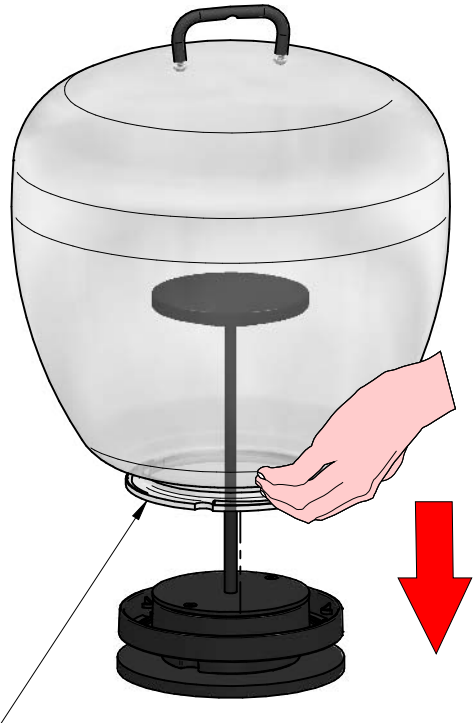

TO AVOID CONDENSATION INSTALL
THE DIFFUSER IN A DRY ENVIRONMENT

2



3



IF THERE IS CONDENSATION IN THE LAMP

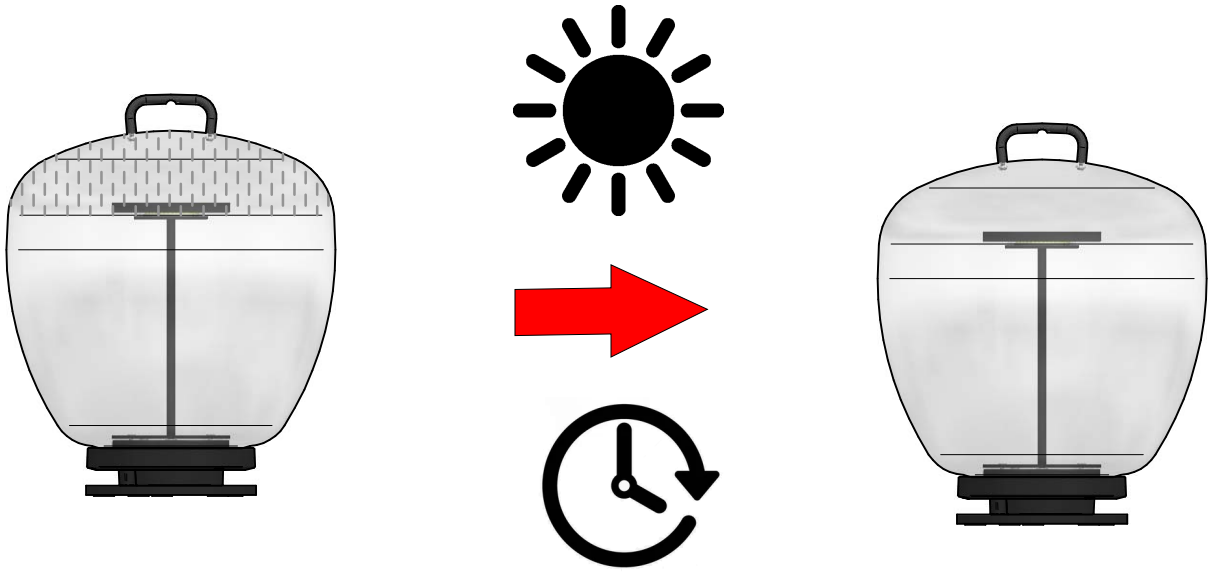

WAIT UNTIL COMPLETE
EVAPORATION

USE A TIMER FOR A DAY/NIGHT CYCLE

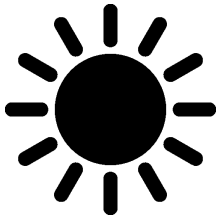

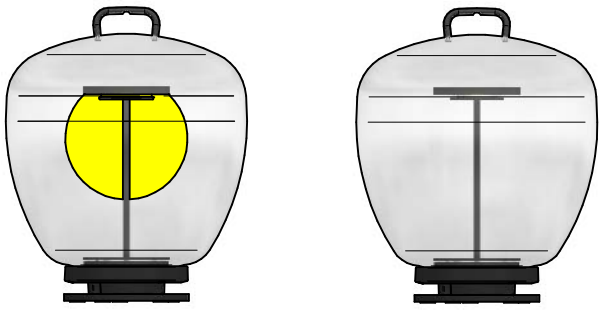

ON

OFF

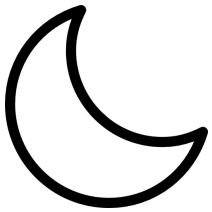

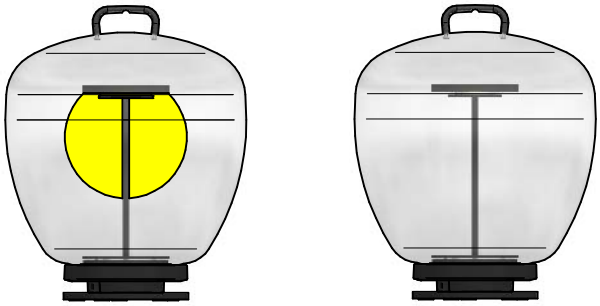

ON

OFF

ISTRUZIONI PER IL LAVAGGIO DELL'APPARECCHIO D'ILLUMINAZIONE
LUMINAIRE CARE INSTRUCTIONS
ISTRUCCIONES PARA LIMPIAR LA LUMINARA
INSTRUCTIONS POUR LE LAVAGE DE L'APPAREIL D'ECLAIRAGE
ANLEITUNG ZUR REINIGUNG DES BELEUCHTUNGSGERATS

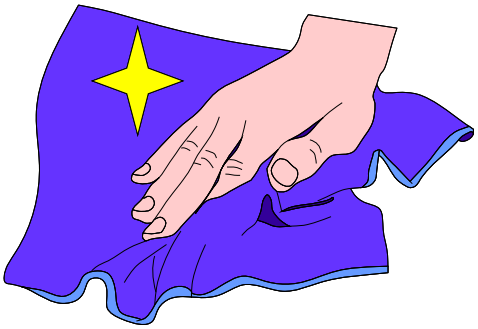



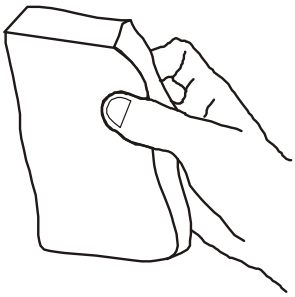

IT - ATTENZIONE!!!

Lavare la superficie del diffusore luce con panno umido, utilizzando solo acqua e sapone neutro.

EN - WARNING!!!

Wipe clean with a cloth damped in water with neutral detergent.

ES - ATENCION!!!

Limpie la superficie del difusor con un pano humedecido con agua y jabon neutro.

FR - ATTENTION!!!

Laver la surface du diffuseur de lumiere a l'aide d'un chiffon humide et en utlisant seulement de l'eau et du savon neutre.

DE - ACHTUNG!!!

Die oberflache vom lampenschirm mit einem feuchten lappen reinigen. De lappen mit wasser und neutralseife befeuchten.

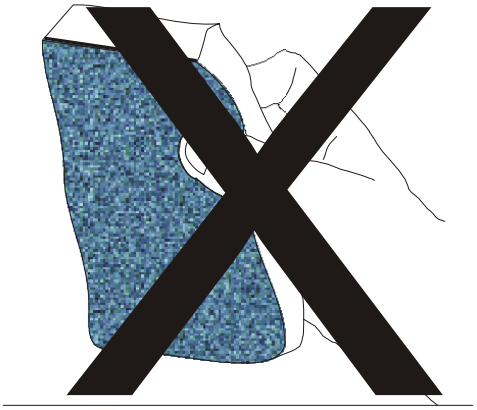

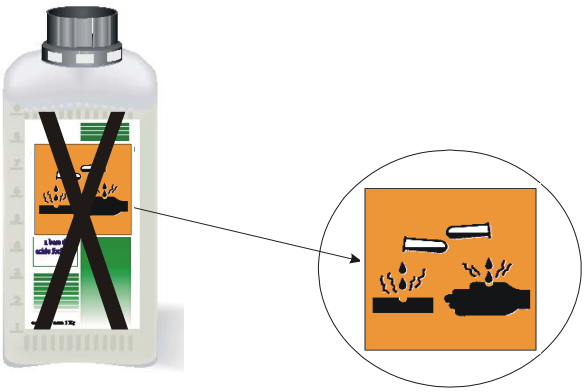

IT - ATTENZIONE!!!

Non utilizzare panni abrasivi e/o solventi.

EN - WARNING!!!

Avoiding the use of chemical solvents and/or abrasive cloths.

ES - ATENCION!!!

No utilizar panos abrasivos y solventes.

FR - ATTENTION!!!

Ne pas utiliser de chiffons abrasifs ou de dissolvants.

DE - ACHTUNG!!!

Abschleifende tuche und/oder losungmittel nicht benutzen.